



NEW FEATURES

Alexa Voice Control

Added the ability to control existing tasks through Amazon Alexa. Just activate our Vantage InFusion System Control skill in the Alexa app by following the steps in the Vantage Voice User Guide.

Control up to 60 tasks through Amazon Alexa



4.8.0 IMPROVEMENTS

Design Center

- Updated the KolorTune Library to include additional tunable profile
- 'Rebuild Project Tasks' option added to the Program Upload window to improve performance of file uploads
- Enabled portrait and landscape display modes on select reports
- Improvements to the DMX Gateway tunable lighting performance
- Disabled 'Keep Controller Profile Changes' check box in the programming dialog when there
 are no EQ profiles in the DC project
- EQLite and Commercial Equinox emulators and firmware have been updated to match latest versions
- Added station load info back into the engraving detail report for ScenePoint stations
- Refined the process for copying and pasting button text with keyboard shortcuts
- Clarified warning messages for changing case in the Change Case Panel
- Refined copy and paste process for DMX Gateway color loads. Color load channels will now be cleared when copy and pasting
- Removed 'Check for Updates' from help menu and toolbar since this feature is obsolete
- Updated the EQ40 button text to follow project settings
- Updated EQ40 button details to exclude Area
- Updated engraving report to allow loads without parent objects
- Updated Area View to allow buttons without parent objects
- Improved synchronization of Equinox profiles when programming the controller
- Enabled reordering of EasyTouch Glass components in Ordering Wizard





RELEASE NOTES Design Center Update 4.8.0



4.8.0 IMPROVEMENTS

Commercial Equinox and Equinox Lite

- Added color picker control for RGBW-CCT and RGBWC-CCT load types
- Improved the scene display when switching profiles
- Improved function for the EQ40 keypad buttons in partitioned areas



IC-APP FIRMWARE

Version 4.8.1.6

- Added support for Alexa Voice Control
- Allow Equinox station to reconnect to system after the station's previous session's buffer was full

2